



Made in America Since 1968

# MAINTENANCE CHECKLIST

## ROGUE



Before conducting any maintenance procedures, make sure you are wearing proper safety equipment and the machine is disconnected from power.

*\*Refer to [Service Manual](#) for precise schedule*

### WEEKLY RECOMMENDED MAINTENANCE

- Inspect the wheels and blade holder for damage
- Make sure the power cord on the operator's handle is in good, working condition
- Plug the unit in and ensure the on/off switch is functioning properly. When the unit is powered on, use the controls to move the machine forward, backward, left and right.
- Make sure the T-Handle wrench that came with the machine is in the holder located directly below the right hand grip towards the middle of the handle.
- Remove any glue, mastic, and debris from the wheels, debris deflector, front weight, and blade holder plate.
- Look for damage to the blade holder
- Check the quick adjustment multi-position handle to ensure it moves freely and locks into place
- Make sure the wheel scraper touches, but does not dig into, the wheel
- Check for misalignment, binding of moving parts, broken parts and any other conditions that may affect operation.
- All maintenance, nameplates and safety stickers must be in place and legible.
- Check that the power cord is free of damage.
- Check that all screws are tight and secure.

### BI-ANNUALLY RECOMMENDED MAINTENANCE\*

*\*More frequently if rented regularly*

- Check blade holder bolts for wear and replace periodically
- Check the blade holder for signs of wear, cracks, or other damage. Replace if necessary
- Check the rear wheels for damage and excessive wear
- Inspect/replace cutting head bearing.\*\*
- Inspect/replace the isolators.\*\*

*\*\* See manual for complete, detailed instruction.*



**SCAN TO  
ACCESS  
YOUR  
MANUAL**