

SAFETY EXPRESS

FIBRECLEAN

**Select
PRO**

part of the **Aramco** family

ESTEAM[®]
CLEANING SYSTEMS 

ESTEAM | UPHOLSTERY PRESPRAY **For Synthetic Upholstered Fabrics**

Upholstery Prespray is for those heavily soiled areas that need extra attention. Designed with a blend of detergents and solvents for use on wet cleanable synthetic upholstery fabrics.

- **Contains ammonia for quick action**
- **Powerful action removes hair and body oils from fabrics**
- **Non-foaming , self-neutralizing**
- **Penetrates and suspends heavy soiling for quick removal**
- **Available in: 1 L (34 oz), 4 L (1.06 US gal), 20 L (5.28 US gal) or 205 L (54.1 US gal)**

FAST ACTING PRESPRAY FOR HEAVILY SOILED FABRICS


DIRECTIONS FOR USE:

Pretest in an inconspicuous location for color fastness and fabric stability.

For Heavy Soil Conditions: Mix ½ gal (1.89 L) of Upholstery Prespray with ½ gal (1.89 L) of warm to hot water to make a 1 gal (3.78 L) ready to use solution (1:1 Dilution).

For Light to Medium Soil Conditions: Mix 1/3 gal (1.26 L) of Upholstery Prespray with 2/3 gal (2.52 L) of warm to hot water to make a 1 gal (3.78 L) ready to use solution (1:2 Dilution).

Keep this product out of reach of children. Read the Material Safety Data Sheet and Product Label before using. Take the necessary precautions dictated by the label to ensure that your health and that of your customers' is protected.

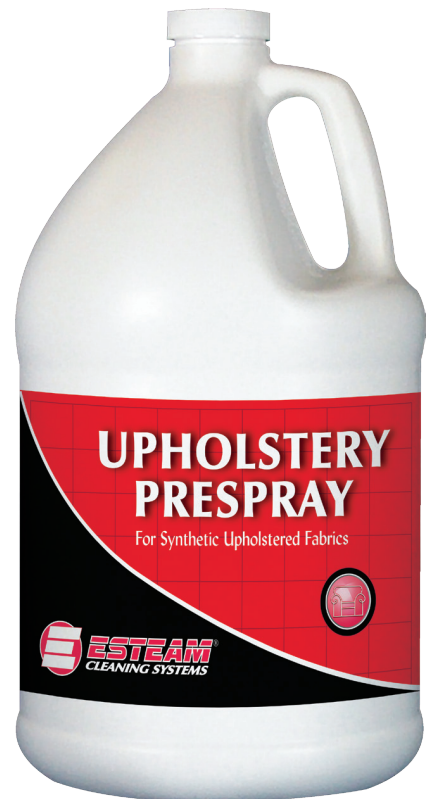

Diluted pH: 10.0
Dilution Ratio: 1:2

Use a waterproof drop sheet to protect flooring before prespraying furniture. Using a hand pump sprayer or trigger sprayer, spray solution onto upholstery. Allow 2 minutes dwell time, then rinse with hot water extraction using Esteam Colorcare, or Esteam Fibre Rinse solution.

For best results: Vacuum upholstery prior to cleaning. Agitate presprayed area using a horse hair upholstery brush.

NOTE: Do not mix Esteam Upholstery Prespray with any other chemical product.

800.465.3898

safetyexpress.com

TORONTO | VANCOUVER | KELOWNA | CALGARY | EDMONTON | SASKATOON | WINNIPEG | OTTAWA | MONTRÉAL | BROSSARD | QUÉBEC | MONCTON