


# What you need to know about your Powerflow!



## Power Cord

To disconnect the power cord, hold the power cord plug at the base close to the battery and pull gently to remove. Do not pull on the cord itself.

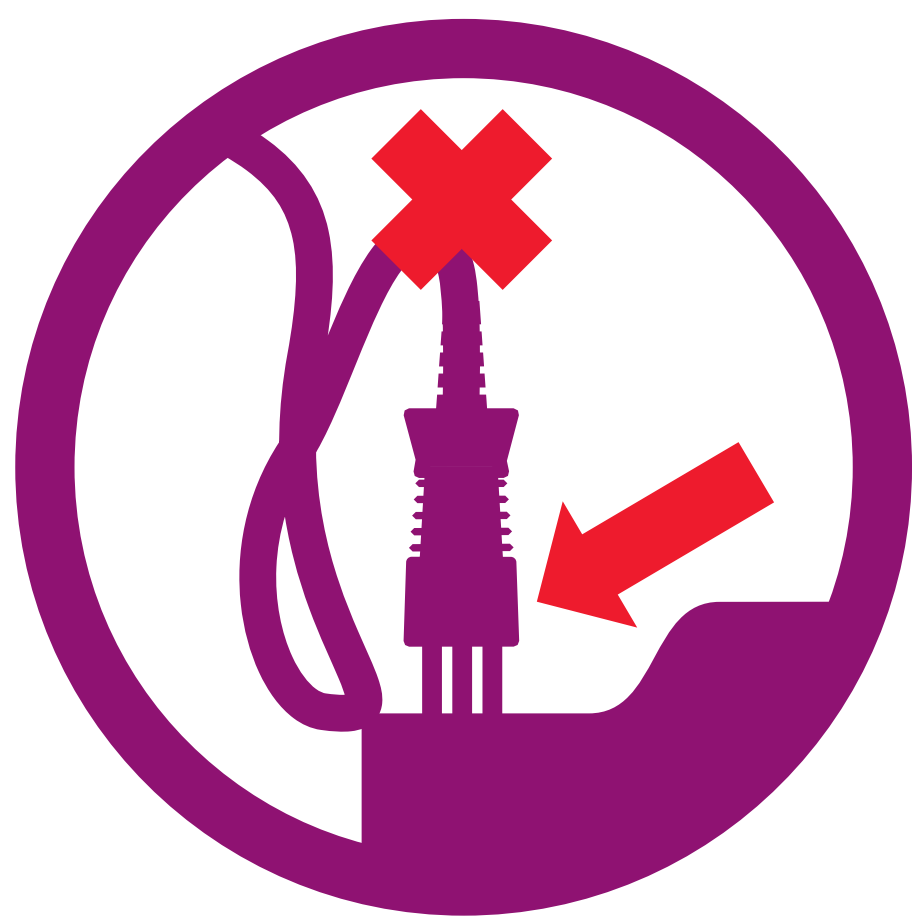

## Battery

Do not submerge the battery in water. Ensure spray and mist do not enter the battery.



## Motor

Do not submerge the motor in water.



## Decontamination

Before entering the shower, twist the filter so that the intake is pointed down.



After the shower, run your motor for 15 minutes to remove any moisture from the motor.

Personal Safety Division  
3M Canada, P.O. Box 5757  
London, ON N6A 4T1

Phone 1-800 364 3577  
Web [www.3M.ca](http://www.3M.ca)

3M Canada Safety Centre  
**1 800 267-4414**  
or visit [www.3M.ca/PPESafety](http://www.3M.ca/PPESafety)

Please recycle. Printed in Canada.  
3M and 3M Science. Applied to Life., are trademarks of 3M.  
Used under license in Canada.  
© 2015, 3M. All rights reserved. 1506-01479 BA-15-20274

- Respiratory protection against certain particulates (dust, mists, fumes, fibers, radionuclides).
- For use up to 1000 x OEL or other applicable government limits, which is lower.
- ANSI Z87.1-2003 high impact face and eye protection.
- Intrinsic safety: Div. 1, Class I, Gr. D; Class II, Gr. E,F,G; Class III, T3.
- Do not use with beards/facial hair or other conditions that prevent a good seal.